

Vela RS232 Command List

1. Connection	
1.1 Port Setting	
Method	Asynchronous communication
Bits per seconds	19200
Data bits	8
Parity	none
Stop bits	1
Flow control	none
1.2 Wiring	
Connect the computer and projector with RS232 cross cable	
2. Communication	
2.1 The Projector command is defined one command/one line that starts "C" and ends carriage return CR .	
2.2 There are two types of command, functional execution commands and status read commands	
2.3 Response for status read command after accepting has different characters.	
Example:	
A. Functional execution command:	
Power ON command is sent to the projector with "C00" CR, the projector returns a *ACK CR or NAK CR code	
PC --> Projector "C" "0" "0" CR	
Projector --> PC	processing command ACK (or NAK) CR
B. Status read command:	
Power Status command is sent to the projector with "CR0" CR, the projector returns a power status plus CR or NAK CR	
PC --> Projector "C" "R" "0" CR	
Projector --> PC	processing command "0" "0" "0" (or NAK) CR
3. Command List	
Command (HEX+CR)	Function
C00(43 30 30 0D)	POWER ON
C01(43 30 31 0D)	POWER OFF(Power OFF immediately)
C02(43 30 32 0D)	POWER OFF
C05(43 30 35 0D)	VGA
C36(43 33 36 0D)	HDMI 1
C37(43 33 37 0D)	HDMI 2
C38(43 33 38 1D)	HD-BaseT or Wireless(Optional)
C15(43 31 35 0D)	NetWork
C16(43 31 36 0D)	Memory Viewer
C17(43 31 37 0D)	USB Display
C8E(43 38 45 0D)	Keystone ↑
C8F(43 31 31 0D)	Keystone ↓
C1C(43 31 43 0D)	Menu on
C1D(43 31 44 0D)	Menu off
C90(43 39 30 0D)	Keystone Right
C91(43 39 31 0D)	Keystone Left
C98(43 39 38 0D)	Keystone Corner
C99(43 39 39 0D)	Keystone Barrel
C43(43 34 33 0D)	Still on
C44(43 34 34 00)	Still off
C0D(43 30 44 00)	Blank on
C0E(43 30 45 0D)	Blank off
C8A(43 38 41 0D)	Timer
C8B(43 38 42 0D)	Timer (Exit)
C0B(43 30 42 0D)	Mute on
C0C(43 30 43 0D)	Mute off
C30(43 33 30 0D)	Digital zoom +
C31(43 33 31 0D)	Digital zoom -
C09(43 30 39 0D)	Volume +
C0A(43 30 41 0D)	Volume -
C19(43 31 39 0D)	Dynamic
C11(43 31 31 0D)	Standard
C39(43 33 39 0D)	Colorboard
C0F(43 30 46 0D)	Screen Normal size
C10(43 31 30 0D)	Screen Wide size

C13(43 31 33 0D)	Cinema
C14(43 31 34 0D)	User Image
C18(43 31 38 00)	Blackboard
C1E(43 31 45 0D)	DISPLAY CLEAR
C20(43 32 30 0D)	BRIGHTNESS +
C21(43 32 31 0D)	BRIGHTNESS -
C27(43 32 37 0D)	IMAGE (Toggle)
C28(43 32 38 0D)	Direct on Enable
C29(43 32 39 0D)	Direct on Disable
C2A(43 32 41 0D)	Power Management Ready
C2B(43 32 42 0D)	Power Management OFF
C2E(43 32 45 0D)	Power Management Shut down
C3A(43 33 41 0D)	POINTER RIGHT
C3B(43 33 42 0D)	POINTER LEFT
C3C(43 33 43 0D)	POINTER UP
C3D(43 33 44 0D)	POINTER DOWN
C3F(43 33 46 0D)	ENTER
C89(43 38 39 0D)	Auto PC ADJ.
CR3(43 52 33 0D)	Light Timer Read
CR0(43 52 30 0D)	Get the projector's operation status:
	"00":Power on
	"80":standby
	"40":Countdown in process
	"20":Cooling Down in process
	"10":Power Failure
	"28-0":TEMPA Cooling Down in process due to Temperature Anomaly
	"28-1":TEMPB Cooling Down in process due to Temperature Anomaly
	"88-0":Standby after TempA Cooling Down process due to Light off
	"88-1":Standby after Temp B Cooling Down process due to Light off
	"24":Power Management cooling
	"04":suspend status (Power management Ready)
	"21":Cooling Down in process after Light off
	"81":Standby after Cooling Down process due to Light off
CR1(43 52 31 0D)	
	Get the information of input source
	VGA
	HDMI 1
	HDMI 2
	HD-BaseT or Wireless(Optional)
	Memory Viewer
	Network
	USB display
CR4(43 52 34 00)	
	Get screen setting status:
	"11":Normal screen setting
	"10":Rear & Ceiling ON
	"01": Rear ON
	"00":Ceiling ON
	"20": Auto Ceiling & Rear ON
CR6(43 52 36 0D)	"21":Auto Ceiling & Rear OFF
	Get the temperature data inside the projector:
	"%1_%2_%3":
	%1=Temperature of Sensor 1
	%2=Temperature of Sensor 2
CR7(43 52 37 0D)	%3=Temperature of Sensor 3
	Temperature data is shown as "00.0"
	Get the Light mode status:
CR ALLPFAIL	"00" Light is out
	"01" Light is on
	Detect detail of the power failure
	000 MAIN, ALL OK
	000 FAN1, ALL OK
	000 FAN2, ALL OK
	000 FAN3, ALL OK
	000 FAN4, ALL OK
	000 FAN5, ALL OK
	000 FAN6, ALL OK